



## **Installation Instructions Quick Fill Suction kit**

SQF-DAMKIT 12/12/08

1. Disconnect the suction hose and elbow fitting from the pump.
2. On the pump inlet add Teflon tape to the exposed male thread, then screw the three way valve (with cam lock fitting) on to the pump as shown below.
3. Re attach the suction hose to the three way valve.
4. The refill hose needs to be connected to a free outlet on the top of the pump. Remove a spare plug and screw on the two way valve fitting as per image below.
5. The refill tube is plumbed through the top of the tank. Drill a hole in the top of the tank, push the fitting through the hole. Reach an arm inside the tank and screw on the nut (tighten well).

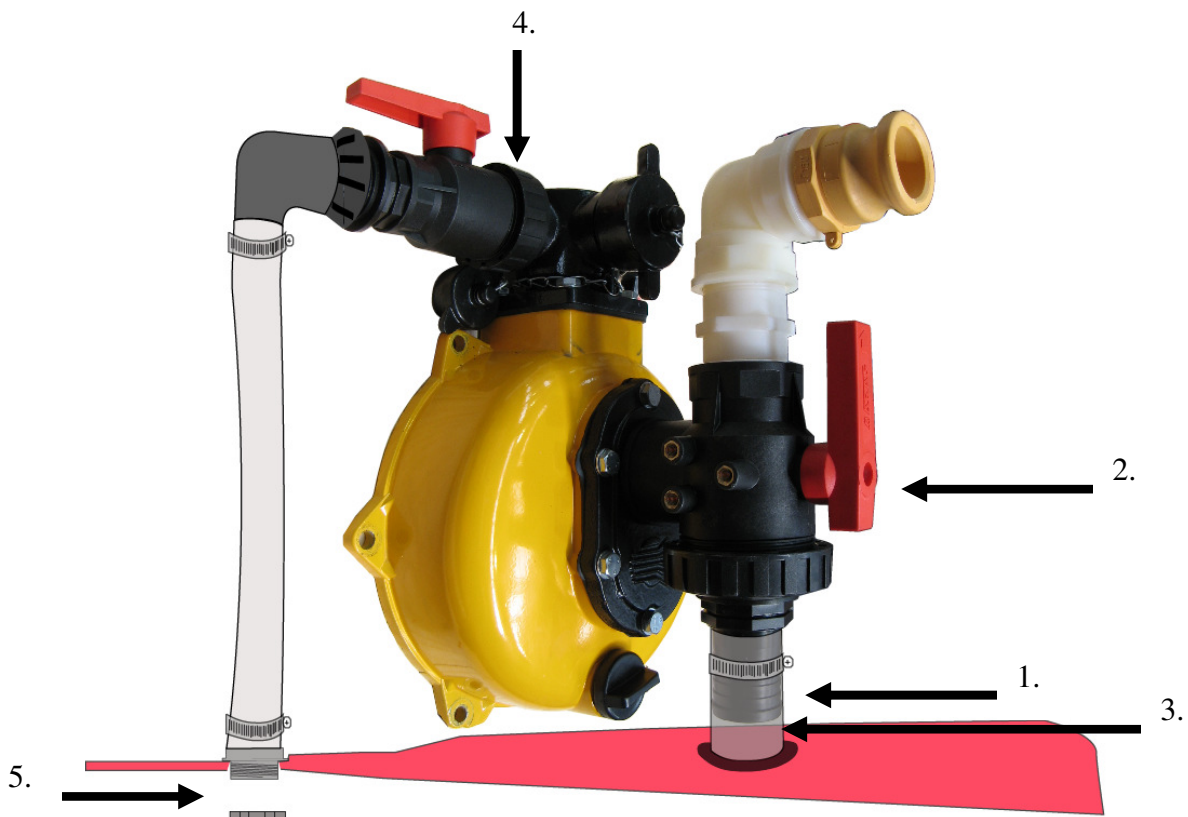

- The final step is to attach the cam lock fitting to the filter with the provided hose and hose clamps.

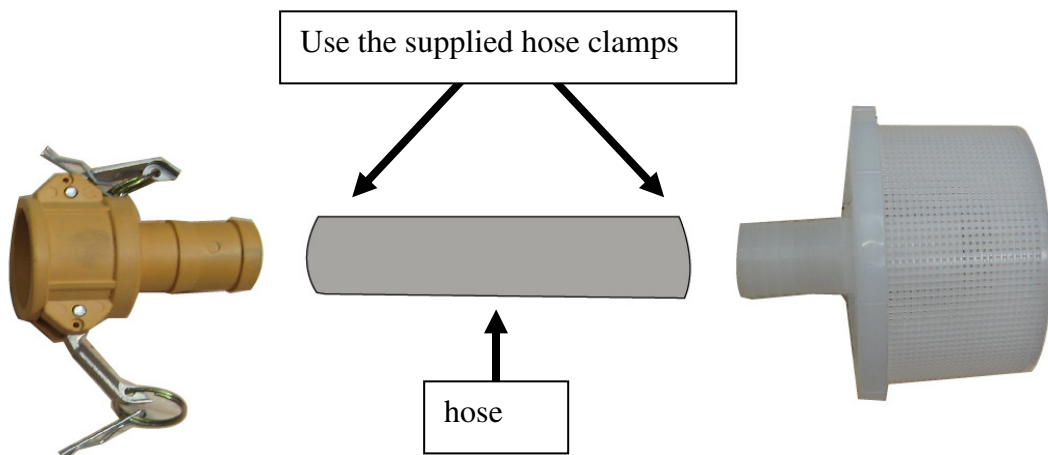

**SILVAN AUSTRALIA PTY. LTD.**

ABN 48 099 851 144

**VICTORIA (HEAD OFFICE)**

244 – 264 Greens Rd,  
Dandenong South 3175  
Victoria Australia

Telephone: +61 (03) 9215 2700

Facsimile: +61 (03) 9215 2701

[www.silvan.com.au](http://www.silvan.com.au)

**NEW ZEALAND**

22 Sunshine Avenue  
Te Rapa, Hamilton, 2001  
New Zealand

Telephone: +64 (07) 8496033\

Facsimile: +64 (07) 8496070

[www.silvannz.c](http://www.silvannz.c)